

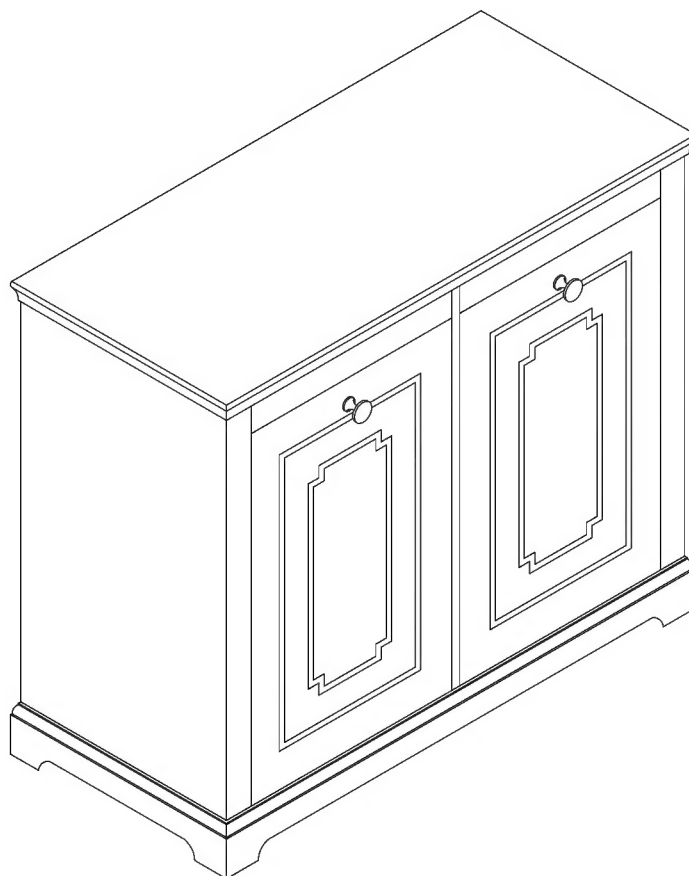
# HOME DECORATORS COLLECTION

HDC# 17555 MFG# TW-19150WO / TW-19150DW  
MANOR DOUBLE HAMPER 30"Hx35"Wx16"D

## ASSEMBLY INSTRUCTIONS

- Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.


Made In China




# BEFORE ASSEMBLY

**IMPORTANT NOTE:** READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.
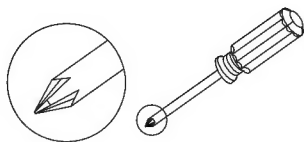
## ASSEMBLY TOOLS REQUIRED



"+"Screw driver

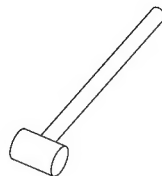


Rubber Mallet



Electric drill

## *WOODEN DOWEL INSTALLATION PROCEDURE*

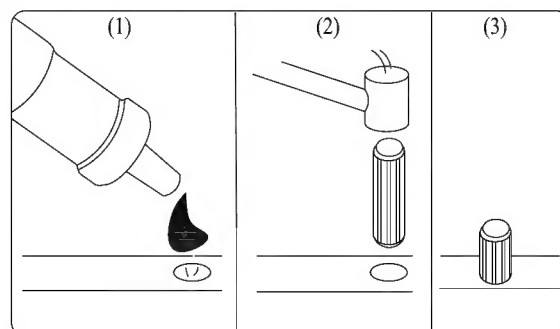- (1) FILL HOLE 1/4 FULL OF GLUE.
- (2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER Mallet OR USE HAND PRESS IN.  
DO NOT USE HAMMER
- (3) WIPE AWAY EXCESS GLUE.



## *HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN*

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.

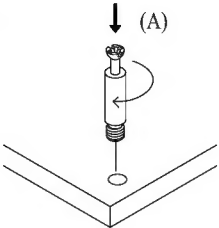
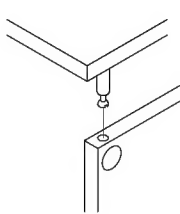
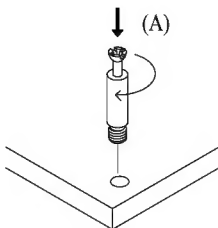
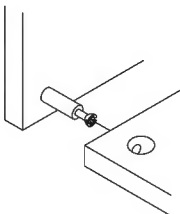
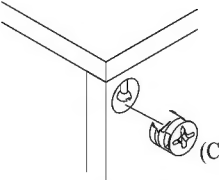
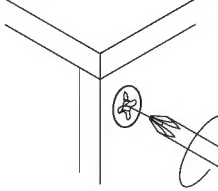
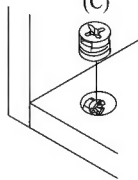
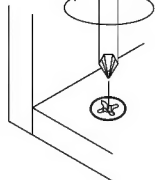
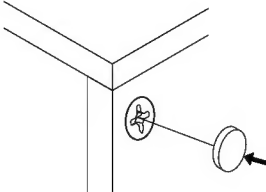
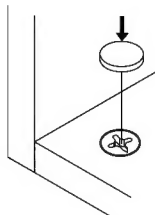
TOOL NEEDED: "+" SCREW DRIVER

STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A "+" SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).

STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER Mallet GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.












STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A "+" SCREWDRIVER.

DETAIL STEP PLEASE SEE THE BELOW PICTURE.
















VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) 	(2) 	(1) 	(2) 
(3) 	(4) 	(3) 	(4) 
(5) 		(5) 	

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

## HARDWARE LIST

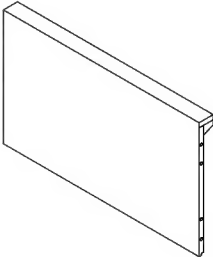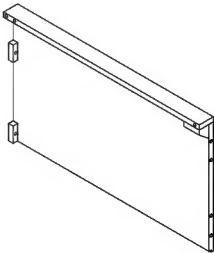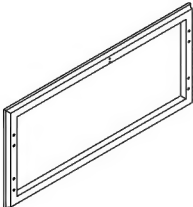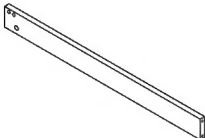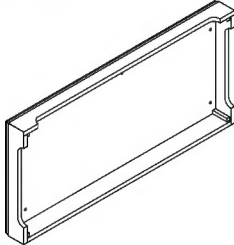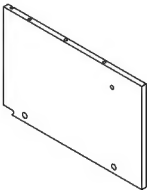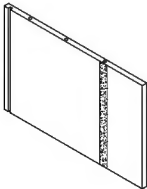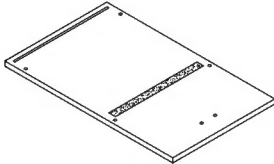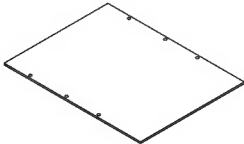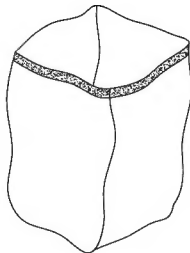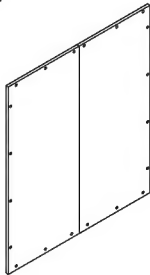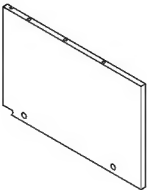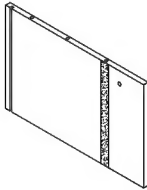WOOD DOWEL 18 PCS  Ø8X30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 9 SETS  Ø6X32mm (2)	KNOB BOLT 2 SETS  (3)	CAM-BOLT CAM-LOCK 9 SETS  (4)	FLAT HEAD SCREW 12 PCS  Ø4X25mm (5)
ROUND HEAD BOLT 2 PCS  (6)	ROUND HEAD SCREW 18 PCS  Ø3X12mm (7)	WOOD DOWEL 1 PC  (8)	ALLEN KEY 1 PC  (9)	GLUE 1 PC  (10)
TILTING PREVENT HARDWARE 1 SET  Ø3X12mm    Ø4X38mm (11)				


# PARTS LIST

<p>LEFT SIDE PANEL 1 PC</p>  <p>A</p>	<p>RIGHT SIDE PANEL 1 PC</p>  <p>B</p>	<p>ACROSS BAR 2 PCS</p>  <p>C</p>
<p>TOP PANEL 1 PC</p>  <p>D</p>	<p>ACROSS BAR 1 PC</p>  <p>E</p>	<p>BOTTOM PANEL 1 PC</p>  <p>F</p>
<p>HAMPER LEFT SIDE PANEL 1 PC</p>  <p>G</p>	<p>HAMPER RIGHT SIDE PANEL 1 PC</p>  <p>H</p>	<p>HAMPER FRONT PANEL 2 PCS</p>  <p>I</p>
<p>HAMPER BACK PANEL 2 PCS</p>  <p>J</p>	<p>HAMPER BOTTOM PANEL 2 PCS</p>  <p>K</p>	<p>FABRIC BAG 2 PCS</p>  <p>L</p>
<p>BACK PANEL 1 PC</p>  <p>M</p>	<p>HAMPER LEFT SIDE PANEL 1 PC</p>  <p>N</p>	<p>HAMPER RIGHT SIDE PANEL 1 PC</p>  <p>O</p>

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.


**STEP 1: ASSEMBLE SIDE PANEL (B), BOTTOM PANEL (F) AND ACROSS BAR (C & E)**

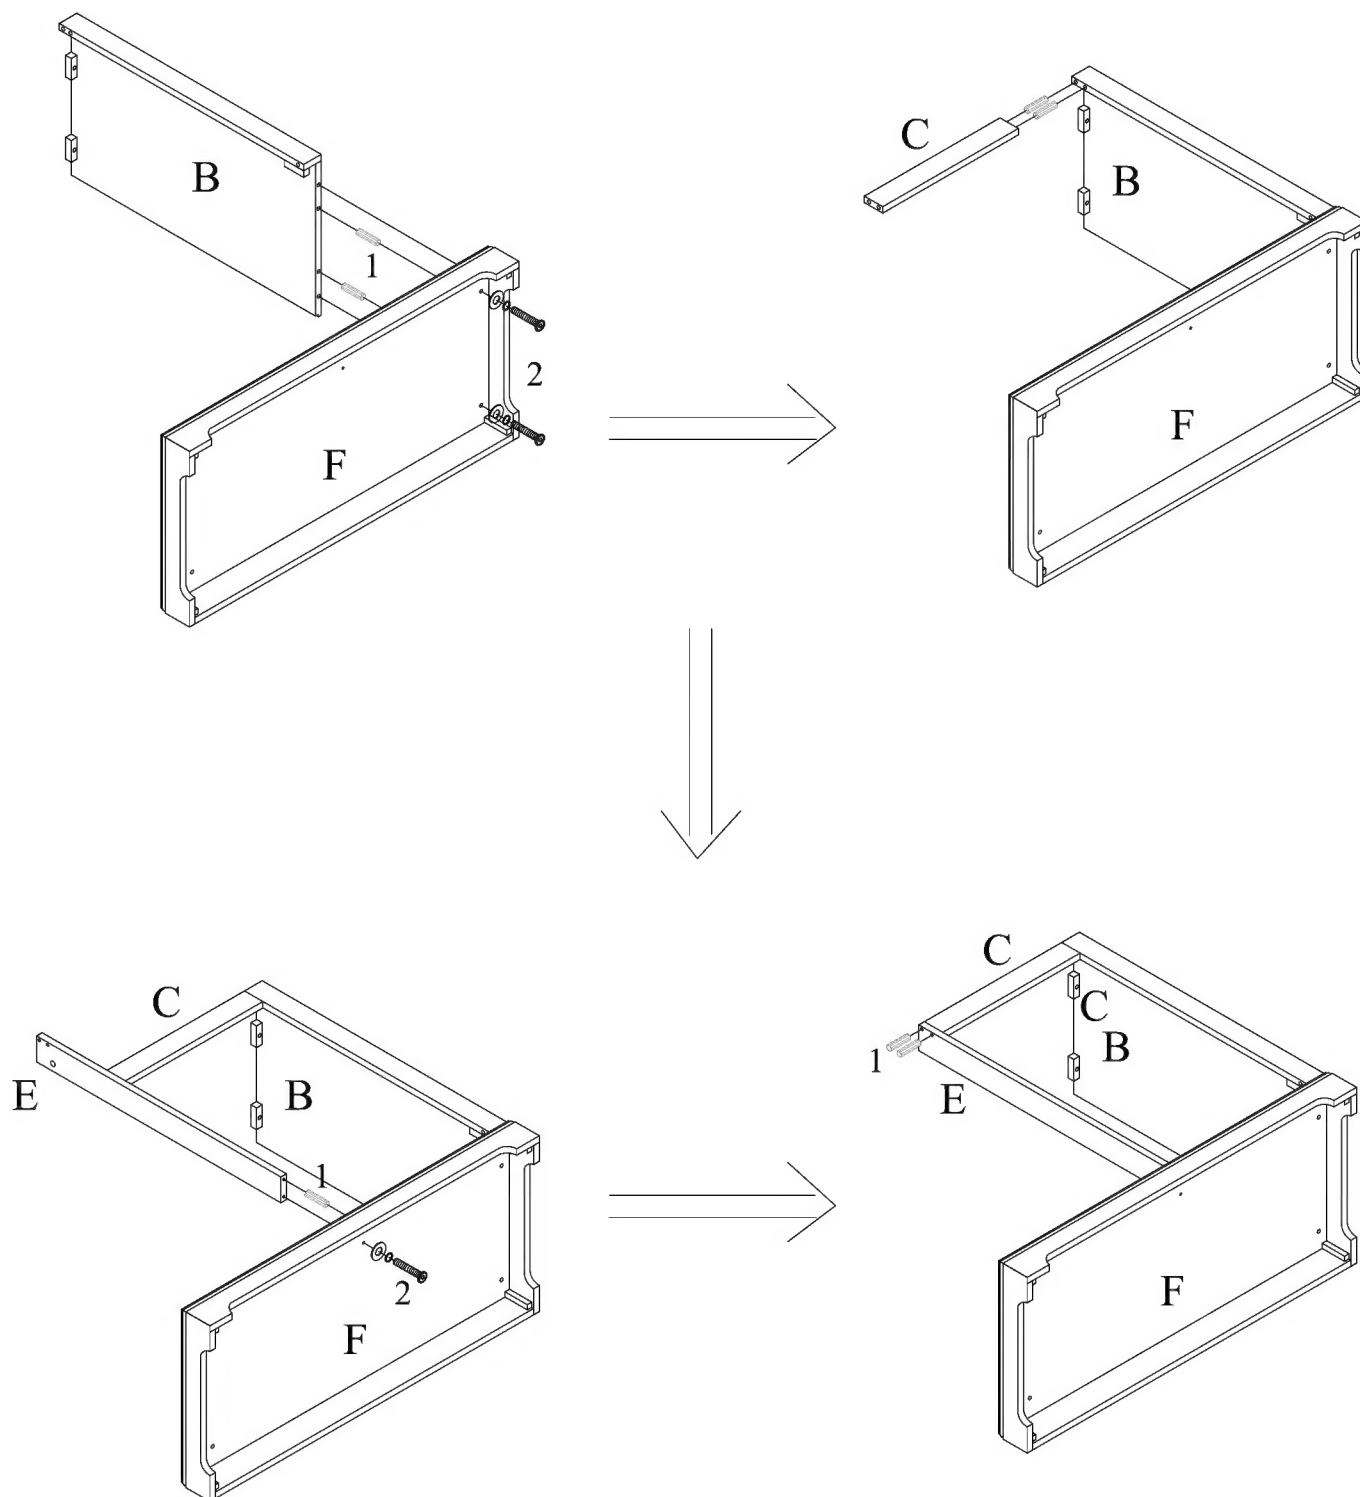- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE WOOD DOWEL (1) AND ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE SIDE PANEL (B), BOTTOM PANEL (F) AND ACROSS BAR (C & E) TOGETHER.




STEP 2: ASSEMBLE SIDE PANEL (A), TOP PANEL (D) AND ACROSS BAR (E)

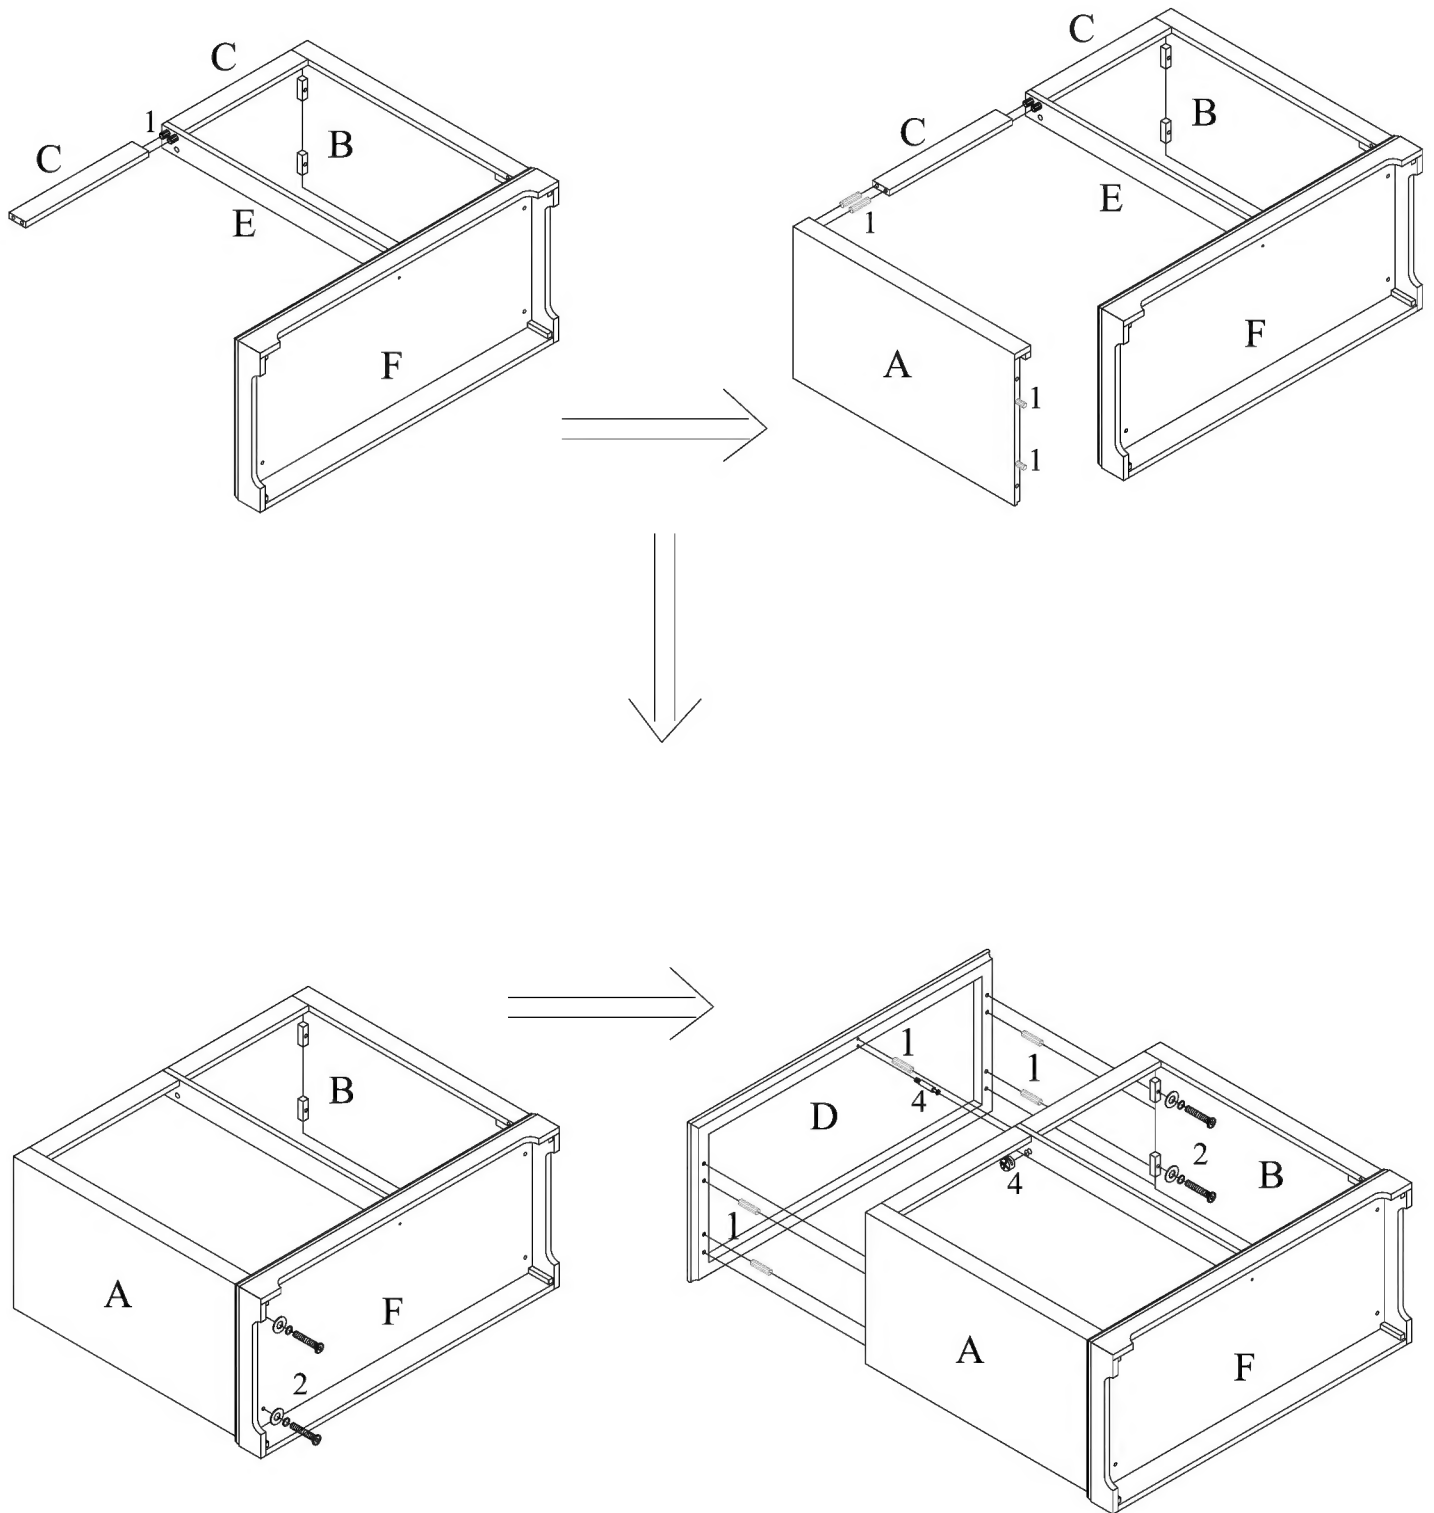- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE WOOD DOWEL (1) AND ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE SIDE PANEL (A), TOP PANEL (D) AND ACROSS BAR (E) TOGETHER.




**STEP 3: ASSEMBLE HAMPER SIDE PANEL (G & H) , HAMPER FRONT PANEL (I) HAMPER BACK (J) AND BOTTOM PANEL (K)**

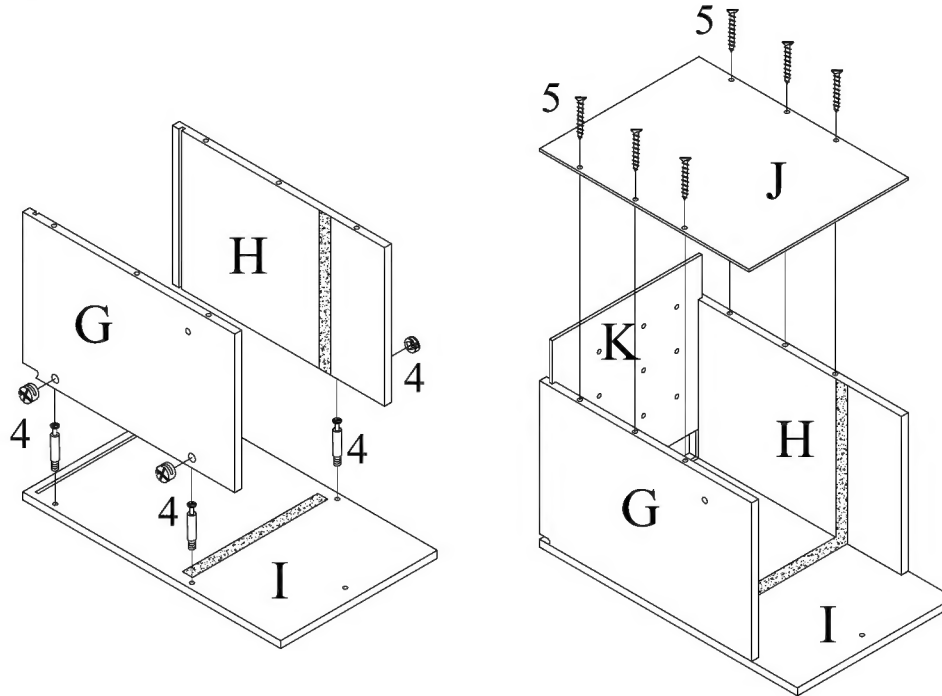- USE CAM-BOLT & CAM-LOCK (4) TO ASSEMBLE HAMPER SIDE PANEL (G & H) AND HAMPER FRONT PANEL (I) TOGETHER.
- INSERT THE HAMPER BOTTOM PANEL (K) INTO SLOTS ON HAMPER SIDE PANEL (G & H).
- USE FLAT HEAD SCREW (5) TO ASSEMBLE HAMPER BACK PANEL (J) AND HAMPER SIDE PANEL (G & H) TOGETHER AS SHOWN.




**STEP 4: ASSEMBLE HAMPER SIDE PANEL (N & O) , HAMPER FRONT PANEL (I) HAMPER BACK (J) AND BOTTOM PANEL (K)**

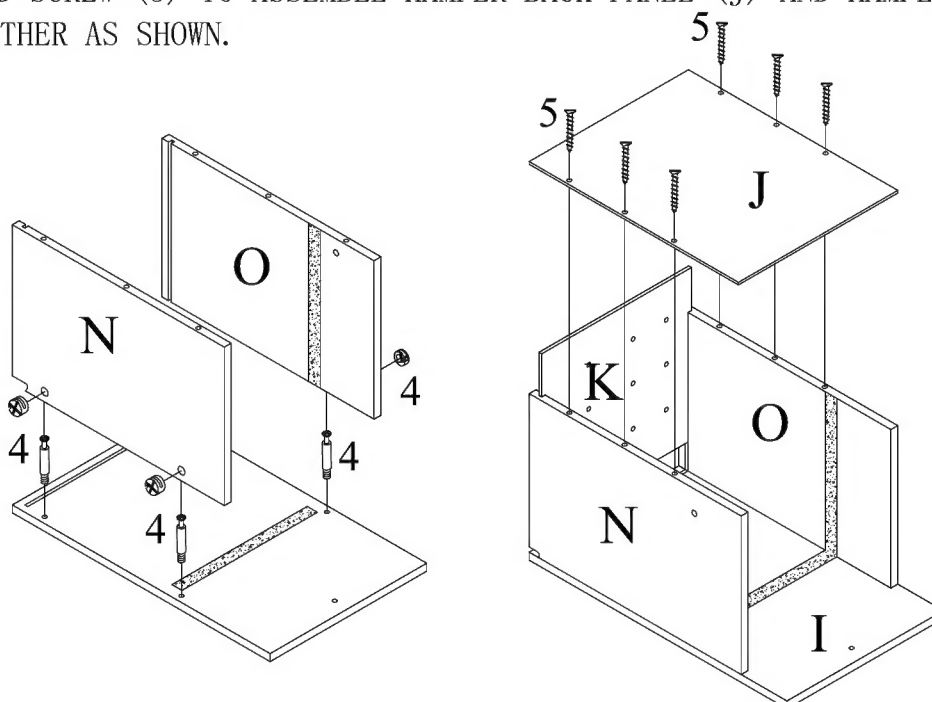- USE CAM-BOLT & CAM-LOCK (4) TO ASSEMBLE HAMPER SIDE PANEL (N & O) AND HAMPER FRONT PANEL (I) TOGETHER.
- INSERT THE HAMPER BOTTOM PANEL (K) INTO SLOTS ON HAMPER SIDE PANEL (N & O).
- USE FLAT HEAD SCREW (5) TO ASSEMBLE HAMPER BACK PANEL (J) AND HAMPER SIDE PANEL (N & O) TOGETHER AS SHOWN.




STEP 5: PLACE WOOD DOWEL (1) AND (8)

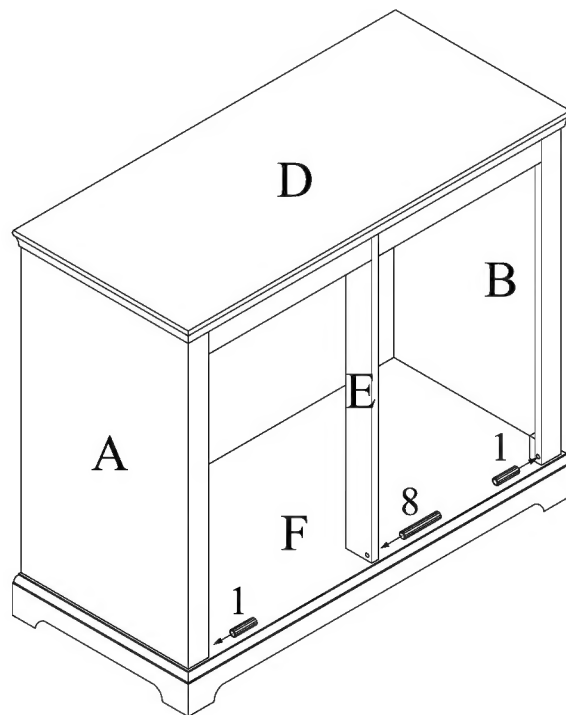- FILL RELEVANT HOLES 1/4 FULL OF GLUE AND INSERT WOOD DOWEL (1 AND 8) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).



STEP 6: PLACE HAMPER BIN

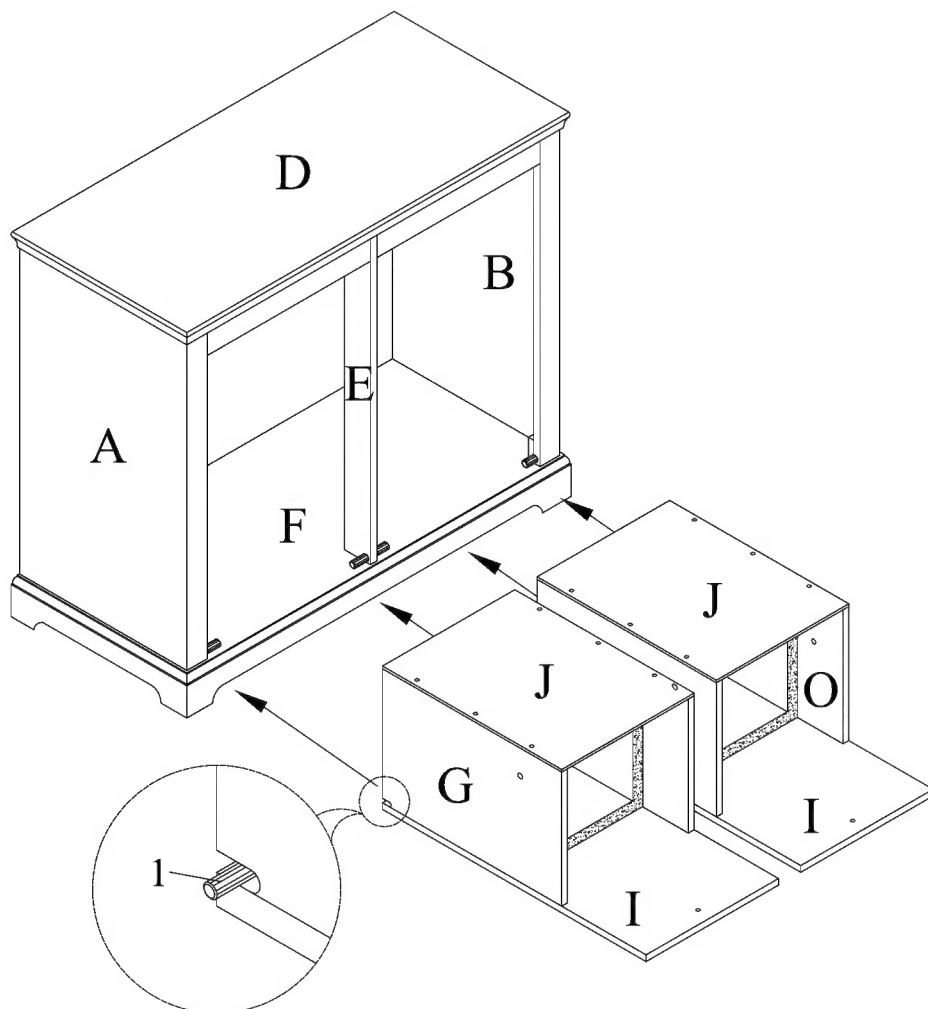
- PLACE THE SLOTS ON THE BOTTOM OF THE HAMPER BIN ONTO THE WOOD DOWELS (1 & 8) PROPERLY AS SHOWN.






**STEP 7: ASSEMBLE BOLT (6), BOLT (3) AND FABRIC BAG (L)**

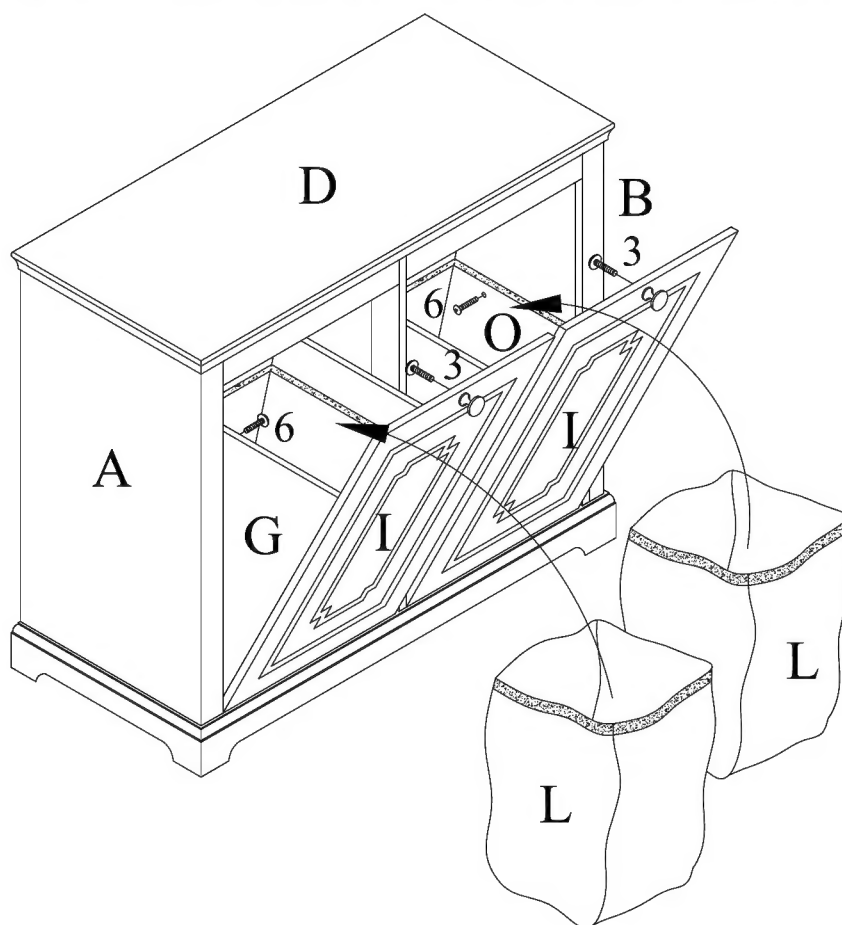- ASSEMBLE BOLT (6) ONTO THE HOLES INSIDE OF SIDE PANEL (G & O).
- USE ROUND HEAD BOLT (3) TO ATTACH KNOB (3) ONTO HAMPER FRONT PANEL (I).
- PUT FABRIC BAG (L) INTO THE HAMPER AND THEN STICK THE VELCRO PROPERLY.



**STEP 8: ASSEMBLE BACK PANEL (M)**

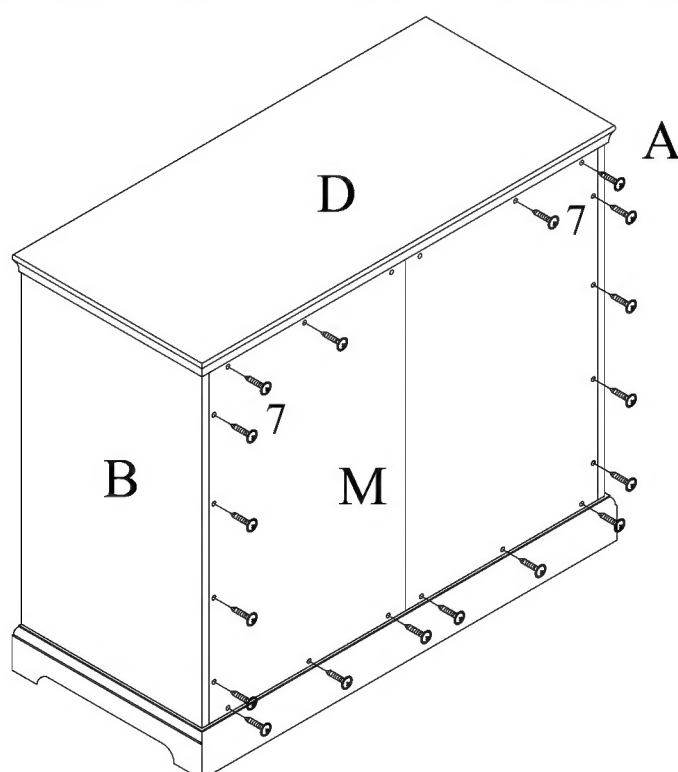- USE ROUND HEAD SCREW (7) TO ATTACH BACK PANEL (M) ON THE BACK OF PRE-ASSEMBLED UNIT.
- NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS UNTIL EVENLY SPACED, THEN FIX BACK PANEL.



STEP 9: ASSEMBLE PREVENT DEVICE (11)

- USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF WALL, INSERT 2 GECKOS INTO THE 2 HOLES BY RUBBER Mallet, USE TWO LONG SCREWS TO ATTACH ONE PLASTIC SLICE ONTO WALL. THEN USE TWO SHORT SCREWS TO ATTACH ANOTHER PLASTIC SLICE ON THE BACK OF PRE-ASSEMBLED PRODUCT.
- USE THE PLASTIC ROPE TO LINK THE PRODUCT AND WALL TOGETHER.

WARNING: THE TILTING PREVENT HARDWARE MUST BE USED AS A PART OF ASSEMBLY, OTHERWISE, TILTING DANGER MAY BE CAUSED.

